




## INSTALLATION OF THE WINDSHIELD WASHER

UWWASHER  
REPL: KAF81




1. Drill a 3/8" hole in the bottom center of the windshield frame and through the plastic cover of the Rhino. Locate it 1" below the glass, centered. (refer to Image #1)
2. Install the spray nozzle in the drilled hole and loosely tighten the included nut on the bottom to hold it in place, but not tight enough to restrict turning. (image #1)

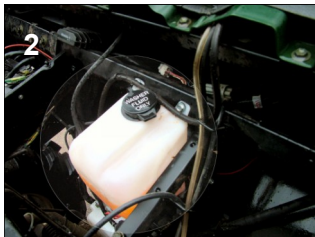


3. Mount the reservoir on the top frame bar, under the hood, using the M6 bolts and nuts provided. (Image #2)
4. Attach the hose to the bottom of the sprayer nozzle, and route the other end down to the reservoir.
5. Attach the hose to the pump fitting.




6. Ground (black wire) the pump to the bottom right reservoir screw. (Image #3)

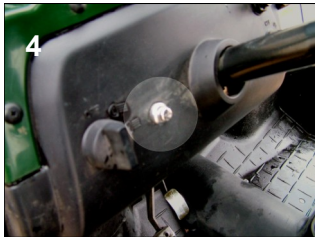

7. If it isn't already installed, mount the washer switch in the dash to the left of the steering column, by drilling a 9/16" hole in the plastic, and then using the nuts provided. (Image #4)

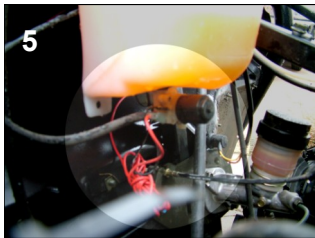

8. Attach one end of the Red Power Wire to the reservoir motor (Image #5), and route the other end up to the inside of the dash and attach it to one terminal (either side) on the back side of the wiper switch (Image #6).

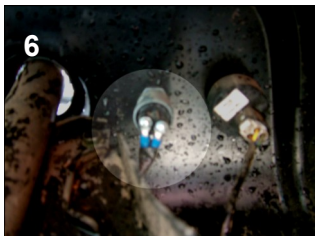

9. Attach the Battery Wire to the unused side of the switch, and route that wire to the Positive (+) battery terminal. Fill your reservoir with Washer Fluid, test the pump using the switch on the dash, and adjust the direction of the nozzle for optimum windshield coverage, then tighten the nut on the bottom of the nozzle.